ITEMS INCLUDED

DRY WALL ANCHOR X 4

TILE ANCHOR X 4

#8 SCREW X 4

MOUNTING BRACKET  X 2

M6X1 SET SCREW X 2

3MM HEX KEY X 1

TOWEL BAR 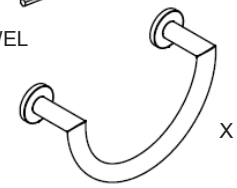 X 1

TOOLS REQUIRED

PHILLIPS SCREW DRIVER 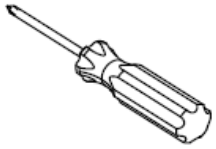

PEN / PENCIL 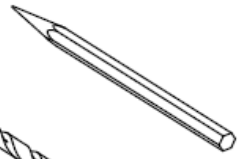

1/4"(6 mm) DRILL 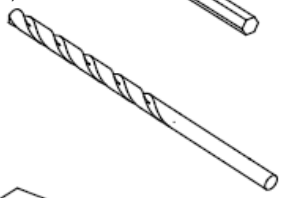

LEVEL SET 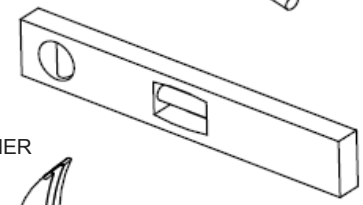

HAMMER 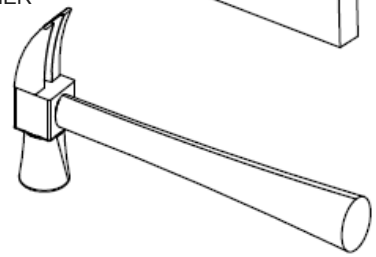

GNG - 4605
EN-0995

KUBIC

INSTALLATION INSTRUCTIONS

4605

TOWEL BAR

GINGER®

Luxury For Your Lifestyle™

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

REV -

1 REMOVE MOUNTING BRACKETS

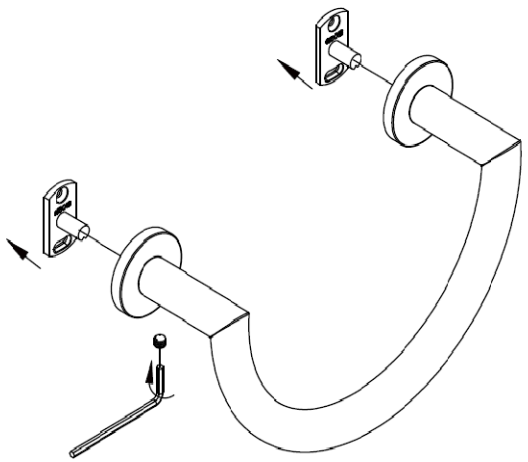

2 ALIGN MOUNTING BRACKETS AND MARK LOCATION

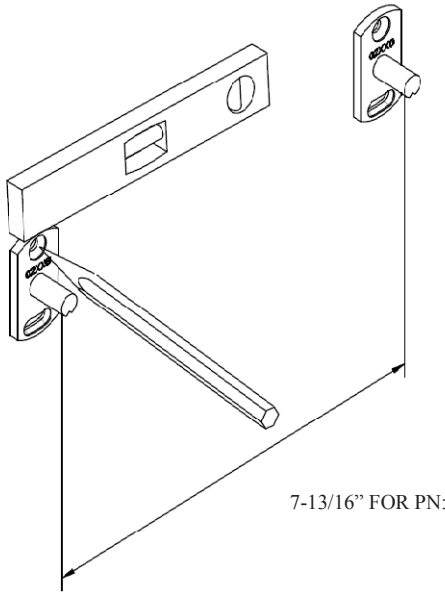

7-13/16” FOR PN: 4605

3 DRY WALL INSTALLATION

DO NOT DRILL

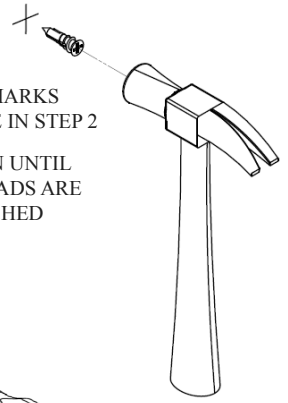

USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

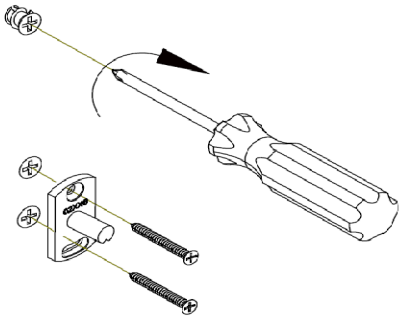

4 TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

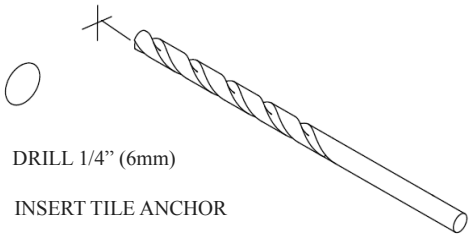

DRILL 1/4” (6mm)

INSERT TILE ANCHOR

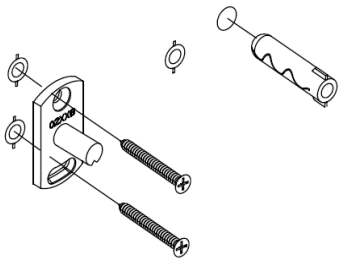

5 INSTALL PRODUCT ONTO BRACKETS

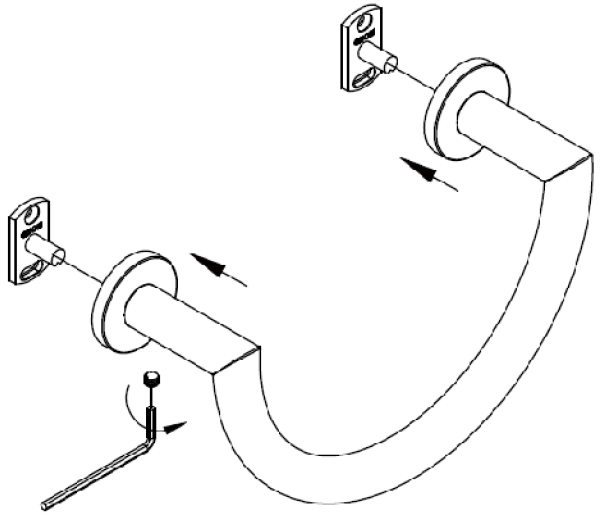

SECURE WITH SET SCREW